



RDF302

Flush-mounted room thermostats with RS485 Modbus communications

RDF302

For 2-pipe, 2-pipe with electrical heater, and 4-pipe fan coil units
For use with compressors in DX type equipment

- RS485 communicative interface in Modbus RTU slave mode
- Backlit display
- 2P / PI / P control
- Outputs for on/off or 3-position control
- Outputs for 3-speed or 1-speed fan
- 2 multifunctional inputs for keycard contact, external sensor, etc.
- Operating modes: Comfort, Economy and Protection
- Automatic or manual fan speed control
- Automatic or manual heating/cooling changeover
- Minimum and maximum limitation of room temperature setpoint
- Control depending on the room or the return air temperature
- Adjustable commissioning and control parameters via local HMI or RS485 Modbus
- Mounting on recessed square conduit box, 60.3 mm fixing centers
- AC 230 V operating voltage
- User and parameter settings can be retained or restored with power loss

Room temperature control (heating or cooling) in individual rooms and zones by means of:

- 2-pipe fan coil units
- 2-pipe fan coil units with electrical heater
- 4-pipe fan coil units
- Compressors in DX-type equipment
- Compressors in DX-type equipment with electrical heater

The RDF302 controls:

- One single or 3-speed fan
- One or two on/off valve actuators
- One on/off valve actuator and one 1-stage electrical heater
- One 3-position valve actuator
- One 1-stage compressor in DX-type equipment, or one 1-stage compressor with electrical heater

Used in systems with:

- Heating or cooling mode
- Automatic heating/cooling changeover
- Manual heating/cooling changeover
- Heating and cooling mode (e.g. 4-pipe system)

The room thermostats are delivered with a fixed set of applications.

The relevant application is selected and activated during commissioning using one of the following tools:

- Local DIP switch and HMI
- Modbus commissioning tools

Functions

- Maintain room temperature via built-in temperature sensor or external room temperature/return air temperature sensor
- Changeover between heating and cooling mode (automatic changeover via local sensor/bus or manual changeover)
- Select application via DIP switches or commissioning tools
- Select operating mode via operating mode button on the thermostat
- Single speed or 3-speed fan control (automatic or manual)
- Display current room temperature or setpoint in °C and/or °F
- Minimum and maximum limitation of room temperature setpoint
- Key lock (automatic, manual or via bus)
- Two multifunctional inputs, freely selectable for:
 - Operating mode switchover contact (keycard)
 - Automatic heating/cooling changeover sensor
 - External room temperature sensor or return air temperature sensor
 - Dew point sensor
 - Electrical heater enabled
 - Fault input
 - Monitor input for temperature sensor or switch status
- Advanced fan control function, e.g. fan kick, fan start, selectable fan operation (enable, disable or depending on heating or cooling mode)
- Purge function together with 2-port valve in a 2-pipe changeover system
- Reminder to clean filters


- Floor heating temperature limit
- Reload factory settings for commissioning and control parameters
- RS 485 Modbus (terminals +, - and REF) for communication with Modbus compatible devices
- Display of outdoor temperature or time of day via Modbus

Applications


The thermostats support the following applications, which can be configured using the DIP switches inside the front panel of the unit or a Modbus commissioning tool.

Remote configuration

All DIP switches need to be set to **OFF** (factory setting) to select an application via commissioning tool.

| | |
|--|--|
| <p>Remote configuration, via commissioning tool (factory setting)</p> | <p>DIP switches</p>  |
|--|--|

Applications for fan coil systems

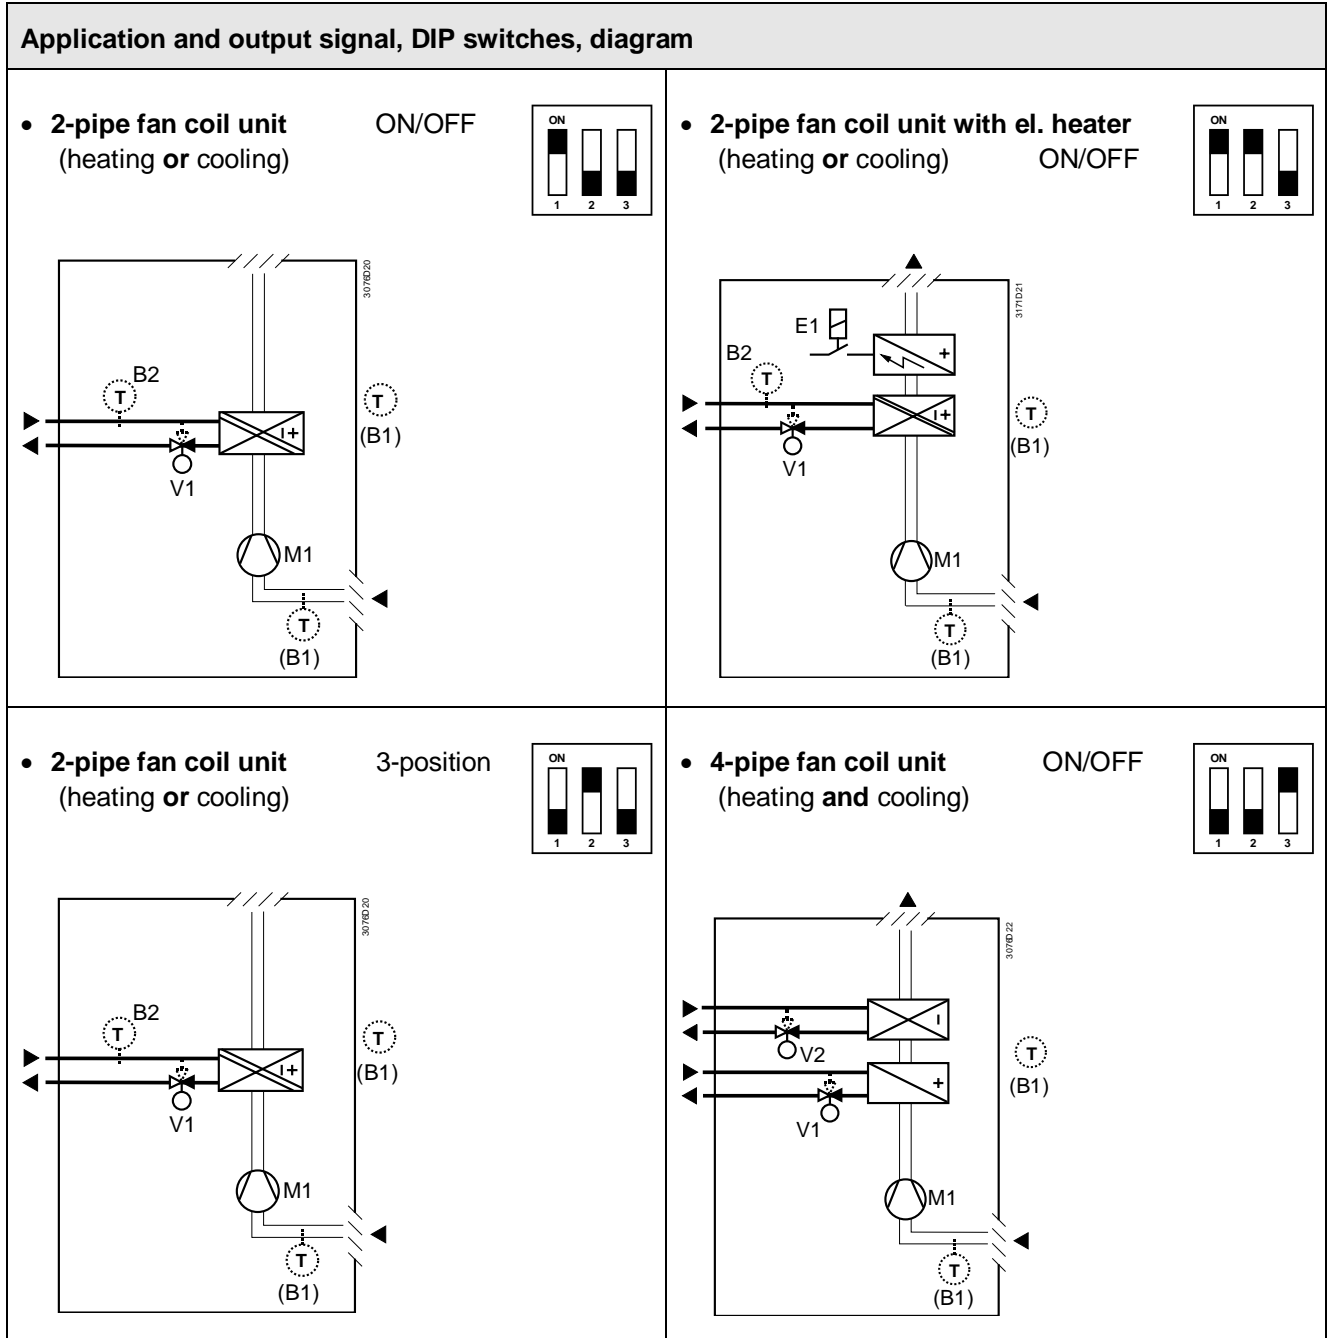

V1 Heating or heating / cooling valve actuator

V2 Cooling valve actuator


E1 Electric heater

B1 Return air temperature sensor or external room temperature sensor (optional)

B2 Changeover sensor (optional)

M1 3- or 1-speed fan

Applications for Universal systems

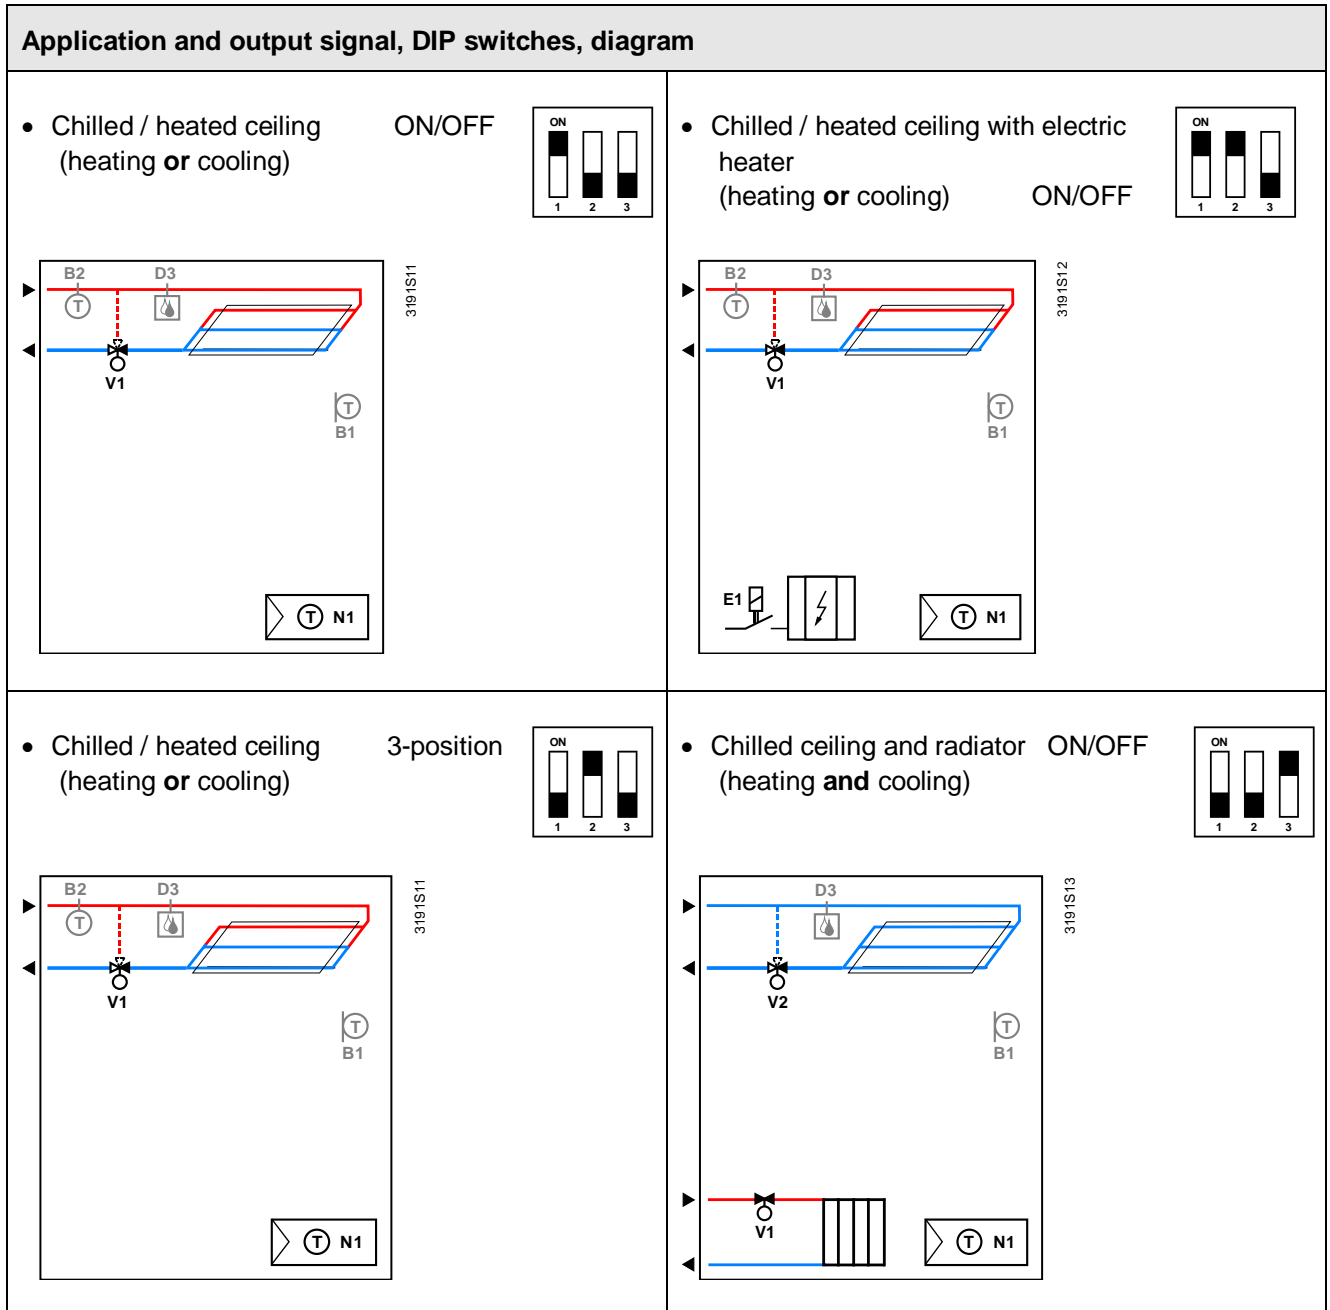

V1 Heating or heating / cooling valve actuator

V2 Cooling valve actuator

E1 Electric heater


B1 Return air temperature sensor or external room temperature sensor (optional)

B2 Changeover sensor (optional)

D3 Dewpoint sensor

Applications for heat pump systems

Application and output signal, DIP switches, diagram

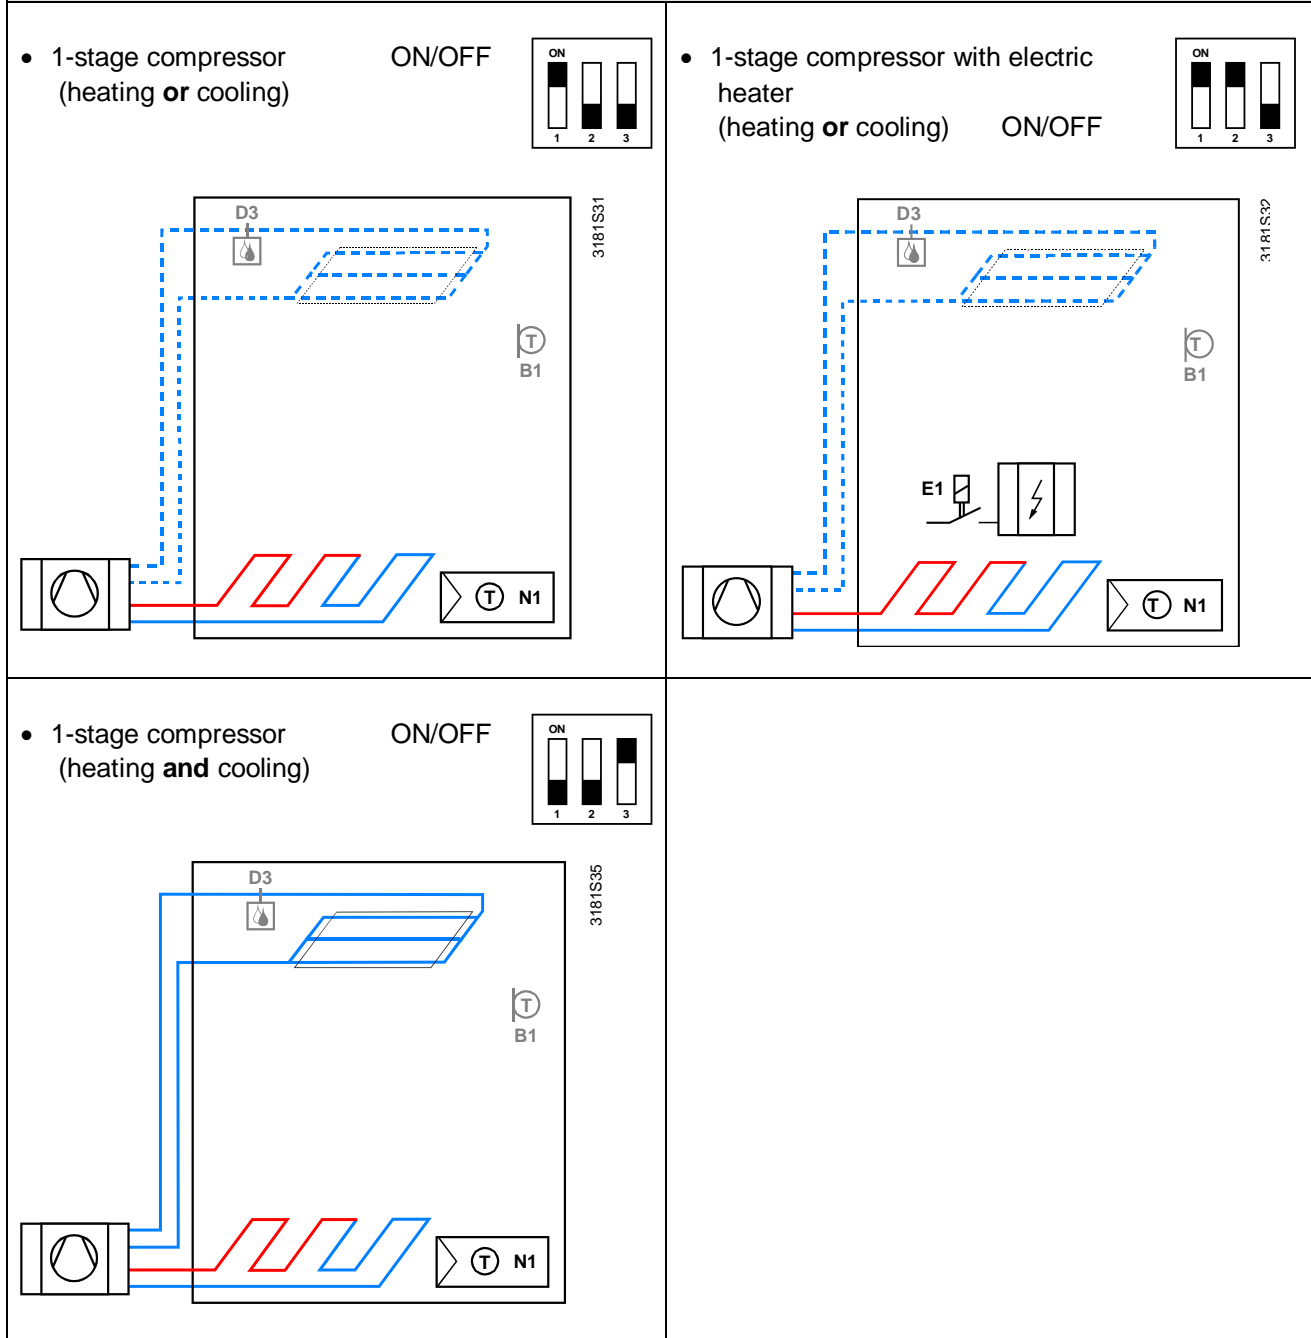

N1 Thermostat
 Terminal Y11: Heating (H&C) or Heating/Cooling
 Terminal Y21: Cooling (H&C)
 E1 Electric heater
















B1 Return air temperature sensor or external room temperature sensor (optional)
 D3 Dewpoint sensor

Ordering

| Product number | Stock number | Designation |
|----------------|--------------|-----------------|
| RDF302 | S55770-T238 | Room thermostat |

Only standard white color (RAL 9003) is available.
Order valve actuators separately.




Equipment combinations

| | Description | | Product no. | Data sheet |
|----------------------|--|---|--|------------|
| | Cable temperature sensor or changeover sensor, cable length 2.5 m NTC (3 kΩ at 25 °C) |  | QAH11.1 | 1840 |
| | Room temperature sensor NTC (3 kΩ at 25 °C) |  | QAA32 | 1747 |
| | Cable temperature sensor cable length 4 m NTC (3 kΩ at 25 °C) |  | QAP1030/UFH | 1854 |
| | Condensation monitor / Dew point monitor |  | QXA2601 / QXA2602 / QXA2603 / AQX2604 | 3302 |
| ON / OFF actuators | Electromotoric ON / OFF actuator |  | SFA21... | 4863 |
| | Electromotoric ON / OFF valve and actuator (only available in AP, UAE, SA and IN) |  | MVI... / MXI... | 4867 |
| | Zone valve actuator (only available in AP, UAE, SA and IN) |  | SUA... | 4832 |
| | Thermal actuator (for radiator valves) |  | STA23... | 4884 |
| | Thermal actuator (for small valves 2.5 mm) |  | STP23... | 4884 |
| 3-position actuators | Electrical actuator, 3-position (for radiator valves) |  | SSA31... | 4893 |
| | Electrical actuator, 3-position (for 2- and 3-port valves / V...P45) |  | SSC31... | 4895 |
| | Electrical actuator, 3-position (for small valves 2.5 mm) |  | SSP31... | 4864 |
| | Electrical actuator, 3-position (for small valves 5.5 mm) |  | SSB31... | 4891 |
| | Electrical actuator, 3-position (for small valves 5.5 mm) |  | SSD31... | 4861 |
| | Electromotoric actuator, 3-position (for small valves 5.5 mm) |  | SQS35... | 4573 |

Note: For the maximal number of actuators in parallel, refer to information in the data sheets of the selected actuators and to this list, depending on which value is lower:

- Parallel operation of max 6 SS... actuators (3-pos) is possible.
- Parallel operation of max 10 ON / OFF actuators is possible.
- Parallel operation of SQS35 is not possible.

Accessories

| Description | Product no. / SSN | Data sheet |
|--|---|------------|
| Changeover mounting kit (50 pcs / package) |  ARG86.3 | N3009 |
| Plastic mounting spacer for flush mount thermostats to increase the headroom in the conduit box by 10 mm |  ARG70.3 | N3009 |
| Conduit box for flush mounted thermostat |  ARG71 / S55770-T137 | N3009 |

Mechanical design

The thermostats consist of 2 parts:


- Front panel with electronics, operating elements and built-in room temperature sensor.
- Mounting base with power electronics.

The rear of the mounting base contains the screw terminals.

The base fits on a square conduit box with 60.3 mm fixing centers.


Slide the front panel in the mounting base and snap on.

Operation and settings

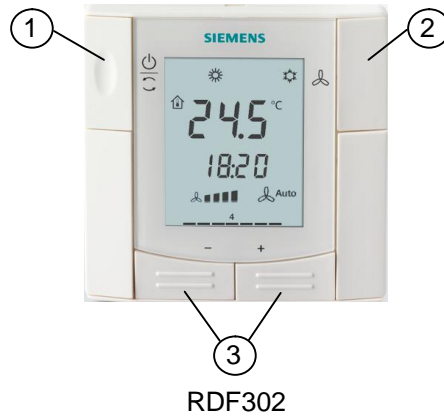

- 1 Operating mode selector
- 2 Change fan operation
- 3 Adjust setpoints and control parameters

Display

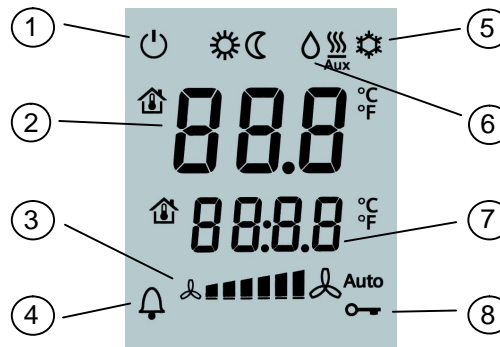


- | | |
|---|---|
| <ol style="list-style-type: none"> 1 Operating mode <ul style="list-style-type: none"> ☰ Protection ☀ Comfort ☾ Economy 2 Displays room temperature, setpoints and control parameters <ul style="list-style-type: none"> 🏠 Symbol indicates current room temperature 3 Fan mode <ul style="list-style-type: none"> 🌀 Auto Auto fan active 🌀🌀🌀🌀🌀 Fan speed low, medium, high 4 🚨 Indicates fault or reminder | <ol style="list-style-type: none"> 5 Heating/cooling mode <ul style="list-style-type: none"> ☀ Cooling ☾ Heating ☾ AUX Electrical heater active 6 💧 Condensation in room (dew point sensor active) 7 Additional user information, like outdoor temperature (🏠) or time from Modbus (selectable via parameters) 8 🔑 Key lock active |
|---|---|

Engineering notes

| | |
|-----------------------|---|
| Device address | The device address of each RDF302 was defaultly assigned to "1". If necessary, engineer/installer can change the address value through the parameter P81. |
| Baud rate | The Baud rate is selectable. Four options, 4800 bps, 9600 bps, 19200 bps and 38400 bps, are available for the RDF302 adapting into the Modbus network (19200 bps is default). |
| Parity | The parity can be set to none, odd or even (even is default). |
| Note: | Once you made any changes on the baud rate or parity, you must reset the power before the changes become effective. To reset the power, you can consider by opening the front panel out of the mounting plate and snap it back. |

Mounting and installation

Mount the room thermostat on a recessed square conduit box with 60.3 mm fixing centers. Do not mount on a wall in niches or bookshelves, behind curtains, above or near heat sources, or exposed to direct solar radiation. Mount about 1.5 m above the floor.

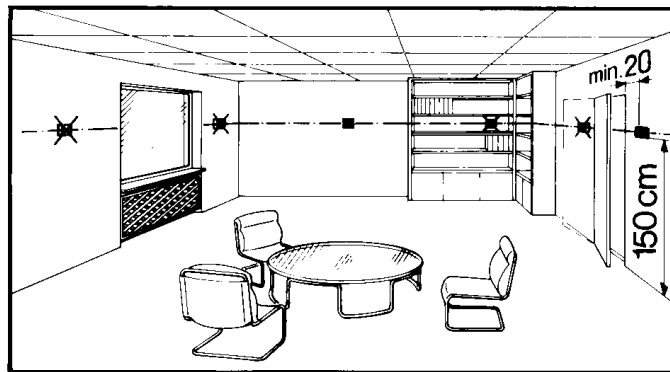

Mounting



- Mount the room thermostat in a clean, dry indoor place without direct airflow from a heating / cooling device, and not exposed to dripping or splash water.
- In case of limited space in the conduit box, use mounting bracket ARG70.3 to increase the headroom by 10 mm.

Wiring

See Mounting Instructions M3079 enclosed with the thermostat.



- Comply with local regulations to wire, protection and earth the thermostat.
- The device has no internal fuse for supply lines to fan and actuators. To avoid risk of fire and injury due to short-circuits, the AC 230 V mains supply line must have a circuit breaker with a rated current of no more than 10 A.
- Properly size the cables to the thermostat, fan and valve actuators for AC 230 V mains voltage.
- Use only valve actuators rated for AC 230 V.
- The wiring cross section used for power supply (L, N), fan/relays (Qx) and 230 V outputs (Yx -N) must be adapted to the preceding overload protection elements (max 10A) under all circumstances. Comply under all circumstances with local regulations.



- Cables of SELV inputs X1-M / X2-M: Use cables with min 230 V insulation, as the conduit box carries AC 230 V mains voltage.
- Inputs X1-M or X2-M: Several switches (e.g. summer / winter switch) may be connected in parallel. Consider overall maximum contact sensing current for switch rating.
- Isolate the cables of Modbus communication input +, - and REF for 230 V.
- No cables provided with a metal shield.
- Disconnect from supply before opening the cover.



Commissioning notes

Applications

The room thermostats are delivered with a fixed set of applications. Select and activate the relevant application during commissioning using one of the following tools:

- Local DIP switch and HMI
- Modbus commissioning tools

Set the DIP switches before snapping the front panel to the mounting plate, if you want to select an application via **DIP switches**. All DIP switches need to be set to “OFF” (“remote configuration”), if you want to select an application via **commissioning tools**. After power is applied, the thermostat resets and all LCD segments flash, indicating that the reset was correct. After the reset, which takes about 3 seconds, the thermostat is ready for commissioning by qualified HVAC staff.

Display “NONE”

If the “NONE” displays on the LCD, it means that the DIP switches was set to OFF-OFF for remote configuration, but the application had not yet assigned to the device. The application can be set by commissioning tools via the RS485 Modbus.



Note

Each time the application is changed, the thermostat reloads the factory setting for all control parameters, except for baud rate (P68), parity (P70) and zone addresses (P81)!

Control parameters

The thermostat's control parameters can be set to ensure optimum performance of the entire system. The parameters can be adjusted using

- Local HMI
- Modbus commissioning tools

Control sequence

The control sequence may need to be set via parameter P01 depending on the application. The factory setting for the 2-pipe application is “Cooling only”; and “Heating and Cooling” for the 4-pipe application.

Compressor-based application



When the thermostat is used with a compressor, adjust the minimum output on-time (parameter P48) and off-time (parameter P49) for Y11/Y21 to avoid damaging the compressor or shortening its life due to frequent switching.

Calibrate sensor

Recalibrate the temperature sensor if the room temperature displayed on the thermostat does not match the room temperature measured (after minimum 1 hour of operation). To do this, change parameter P05.

Setpoint and range limitation

We recommend to review the setpoints and setpoint ranges (parameters P08...P12) and change them as needed to achieve maximum comfort and save energy.





Disposal



The devices are considered electronics devices for disposal in term of European Directive 2012/19/EU and may not be disposed of as domestic waste.


- Dispose of the device via the channels provided for this purpose
- Comply with all local and currently applicable laws and regulations.

Technical data

| | | |
|--|--|---|
| Power supply | Rated voltage | AC 230 V |
| | Frequency | 50/60 Hz |
| | Power consumption | Max. 7 VA / 3.7 W |
|  | <hr/> | |
| Caution  | No internal fuse! | |
| | External preliminary protection with max C 10 A circuit breaker required in all cases. | |
| Outputs | Fan control Q1, Q2, Q3-N | AC 230 V |
| | Rating | 5 mA...5(2) A |
| | <hr/> | |
| | Fans must NOT be connected in parallel! | |
|  | Note! | Connect one fan directly, for additional fans, one relay for each speed. |
| | <hr/> | |
| | Control output Y11-N / Y21-N (N.O.) | AC 230 V |
| | Rating | Max. 5(2) A |
| Caution  | No internal fuse! | |
| | External preliminary protection with max C 10 A circuit breakers in the supply line required in all cases. | |
| Inputs | <hr/> | |
| | Multifunctional input X1-M / X2-M | |
| | Temperature sensor input: | |
| | Type | NTC (3 kΩ at 25 °C) |
| | Temperature range | 0...49 °C |
| | Cable length | Max. 80 m |
| | Digital input: | |
| | Operating action | Selectable (NO / NC) |
| | Contact sensing | SELV DC 0...5 V / max 5 mA |
| | Parallel connection of several thermostats for one switch | Max. 20 thermostats per switch |
| Insulation against mains voltage (SELV) | 4 kV, reinforced insulation | |
| Function of inputs: | Selectable | |
| External temperature sensor, heating/cooling changeover sensor, operating mode switch-over contact, dew point monitor contact, enable electrical heater contact, fault contact, monitoring input | X1: P38 X2: P40 | |
| Modbus | <hr/> | |
| | Interface type | RS485 Modbus RTU, Wire (ref.): 16 AWG, 1 pair, shielded serial line with 1.5 mm ² and length < 1200 m |
| | Bus current | Max. 50 mA |
| | Modbus topology: | See Modbus manual (MODBUS over serial line specification and implementation guide from http://www.modbus.org). |

| | | |
|---|---|--|
| Operational data | Switching differential, adjustable | |
| | Heating mode (P30) | 2 K (0.5...6 K) |
| | Cooling mode (P31) | 1 K (0.5...6 K) |
| | Setpoint setting and range | |
| | ☼ Comfort (P08) | 21 °C (5...40 °C) |
| | ☺ Economy (P11-P12) | 15 °C / 30 °C (OFF, 5...40 °C) |
| | ☹ Protection (P11-P12) | 8 °C / OFF (OFF, 5...40 °C) |
| | Multifunctional input X1/X2 | Selectable 0...8 |
| | Input X1 default value (P38) | 3 (Op. Mode switchover) |
| | Input X2 default value (P40) | 1 (External temp. sensor) |
| | Built-in room temperature sensor | |
| | Measuring range | 0...49 °C |
| | Accuracy at 25 °C | < ± 0.5 K |
| | Temperature calibration range | ± 3.0 K |
| | Settings and display resolution | |
| Setpoints | 0.5 °C | |
| Current temperature value displayed | 0.5 °C | |
| Environmental conditions | Operation | As per IEC 60721-3-3 |
| | Climatic conditions | Class 3K5 |
| | Temperature | 0...50 °C |
| | Humidity | <95 % r.h. |
| | Transport | As per IEC 60721-3-2 |
| | Climatic conditions | Class 2K3 |
| | Temperature | -25...60 °C |
| | Humidity | <95 % r.h. |
| | Mechanical conditions | Class 2M2 |
| | Storage | As per IEC 60721-3-1 |
| | Climatic conditions | Class 1K3 |
| | Temperature | -25...60 °C |
| Humidity | <95 % r.h. | |
| Standards and directives | EU Conformity (CE) | CE1T3079xx ^{*)} |
| | Safety class | II as per EN 60730-1 |
| | Pollution class | Normal |
| | Degree of protection of housing | IP 30 as per EN 60529 |
| Environmental compatibility | The product environmental declaration CE1E3079 ^{*)} contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal). | |
| General | Connection terminals | Solid wires or prepared stranded wires 1 x 0.4...1.5 mm ² |
| | Housing front color | RAL 9003 white |
| | Weight without / with packaging | 0.174 kg/0.261 kg |
| *) The documents can be downloaded from http://siemens.com/bt/download . | | |


Connection terminals

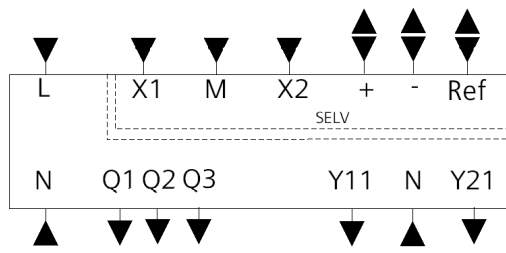

| | |
|----------|---|
| L, N | Operating voltage AC 230 V |
| Q1 | Control output "Fan speed 1 AC 230 V" |
| Q2 | Control output "Fan speed 2 AC 230 V" |
| Q3 | Control output "Fan speed 3 AC 230 V" |
| Y11, Y21 | Control output "Valve" AC 230 V (N.O., for normally closed valves), output for compressor or output for electrical heater |
| X1, X2 | Multifunctional input for temperature sensor (e.g. QAH11.1) or potential-free switch Factory setting: X1 = Operating mode switchover contact X2 = External sensor (function can be selected via parameter P38/P40). |
| M | Measuring neutral for sensor and switch |
| + | RS485 Modbus connection |
| - | RS485 Modbus connection |
| REF | RS485 signal / common ground (Differential common) |

Connection diagrams

Application

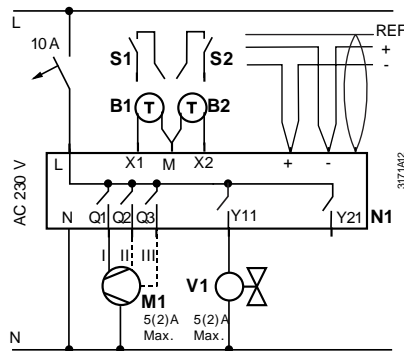

| | |
|--------|---|
| N1 | Room thermostat RDF302... |
| M1 | 1- or 3-speed fan |
| V1 | Valve actuator, 2- or 3-position |
| V1, V2 | Valve actuator, 2-position |
| E1 | Electric heater |
| C1, C2 | 1-stage compressor |
| S1, S2 | Switch (keycard, window contact, presence detector, etc.) |
| B1, B2 | Temperature sensor (return air temperature, external room temperature, changeover sensor, etc.) |
| + | RS485 Modbus connection |
| - | RS485 Modbus connection |
| REF | RS485 signal/common ground (Differential common) |

2-pipe, 2-position

2-pipe, 3-position

2-pipe & electric heater

4-pipe

1-stage compressor (heating and/or cooling)

1-stage compressor & electric heater

Dimensions (mm)

